



Application Guide

Modem Keepalive Configuration



Contents

<i>Contents</i>	2
<i>Revision History</i>	2
1 Overview	3
2 Description	3
2.1 Topology	3
2.2 Hongdian Setup	4

Revision History

Updates between document versions are cumulative. Therefore, the latest document version contains all updates made to previous versions.

Doc Version	Product	Release Data	Details
V1.0	Hongdian Router	2017.08.23	First Release
V2.0	Hongdian Router	2020.09.03	

1 Overview

The modem keepalive is used to maintain data traffic interaction between the device and the base station to ensure that the base station will not kick off the Modem due to a long period of time without traffic, resulting in the device falling offline or replaying, and to ensure that the device remains stable online for a long time.

2 Description

2.1 Topology



2.2 Hongdian Setup

- Let the PC connect to the router and browse into the router's configuration web page. Enter "Network->Modem" page and click "Mod" button to configure keepalive function.

Interface Name	APN	Service Code	Username	Simcard	Operation
0	---	---	---	SIM1	Mod

Add **Refresh**

- Click the "Display" button to set the modem keepalive function

Auto-Dialup	Enable Disable
-------------	------------------------------

Basic Settings	
Interface Name	<input type="text" value="0"/> * Max length is 12
APN	<input type="text"/> Max length is 39
Service Code	<input type="text"/> Max length is 64
Username	<input type="text"/> Max length is 64
Password	<input type="text"/> Max length is 64
PIN	<input type="text"/> Max length is 64
Operator	<input type="button" value="auto"/>
Network Type	<input type="button" value="fdd-lte"/>
Protocol Type	<input type="button" value="ipv4"/>
Simcard	<input checked="" type="radio"/> SIM1 <input type="radio"/> SIM2
Advanced Settings	Display

Save **Return**

3. Set the Keepalive to “on” and input the check ip address and port on “Address” and “port”,if you don’t set the check port,will use the TCP 22 port as the default value

The screenshot shows the 'Modem' tab selected in the top navigation bar. Under the 'Basic Settings' section, the 'Keepalive' dropdown is set to 'on'. The 'Address' field contains '192.168.8.1' and the 'Port' field contains '1-65535'. The 'Interval' field also contains '1-65535'. The 'Dail Method' section shows 'Connection mode' set to 'dhcp'. The 'Keepalive' section is expanded, showing the configuration details.

Setting	Value
Keepalive	on
Address	192.168.8.1
Port	1-65535
Interval	1-65535



Create smart things



Contact us

F14 - F16, Tower A, Building 14, No.12, Ganli 6th Road, Longgang District, Shenzhen 518112, China.

+86-755-88864288-5

+86-755-83404677

hongdianchina

www.hongdian.com

sales@hongdian.com

[Hongdian_China](https://twitter.com/Hongdian_China)