



Application Guide

Hongdian- Timing Reboot



Contents

Contents	2
Revision History	2
1 Overview	3
2 Description	3

Revision History

Updates between document versions are cumulative. Therefore, the latest document version contains all updates made to previous versions.

Doc Version	Product	Release Data	Details
V1.0	Hongdian Router	2017.08.23	First Release

1 Overview

This article shows you how to configure "Timing" function of Hongdian Router with an example of timing reboot.

2 Description

1. This configuration means the device would reboot at every 22:00. Make sure time is right. You can synchronize time through System→Clock.

Build time: 140604-210136
Time: Wed Sep 17 13:47:54 2014

Network Applications VPN Forward Security System Status

ICMP Check DDNS DTU MZM **Timing** Help

Status

Basic Settings

Task Name * Max length is 12

Task Type

Set Time

Time Type


Clock : - : eg. 00:00-23:59

Day - eg. 01-31

Week - eg. 1-7

Note:
Please make sure the time of system is correct before enabling this function.

Time Format:
There are three kinds of timing modes provided: Range, Interval, and Clock. If you want to set clock configure previous clock and next clock times identically. The time range is only suitable for online action.

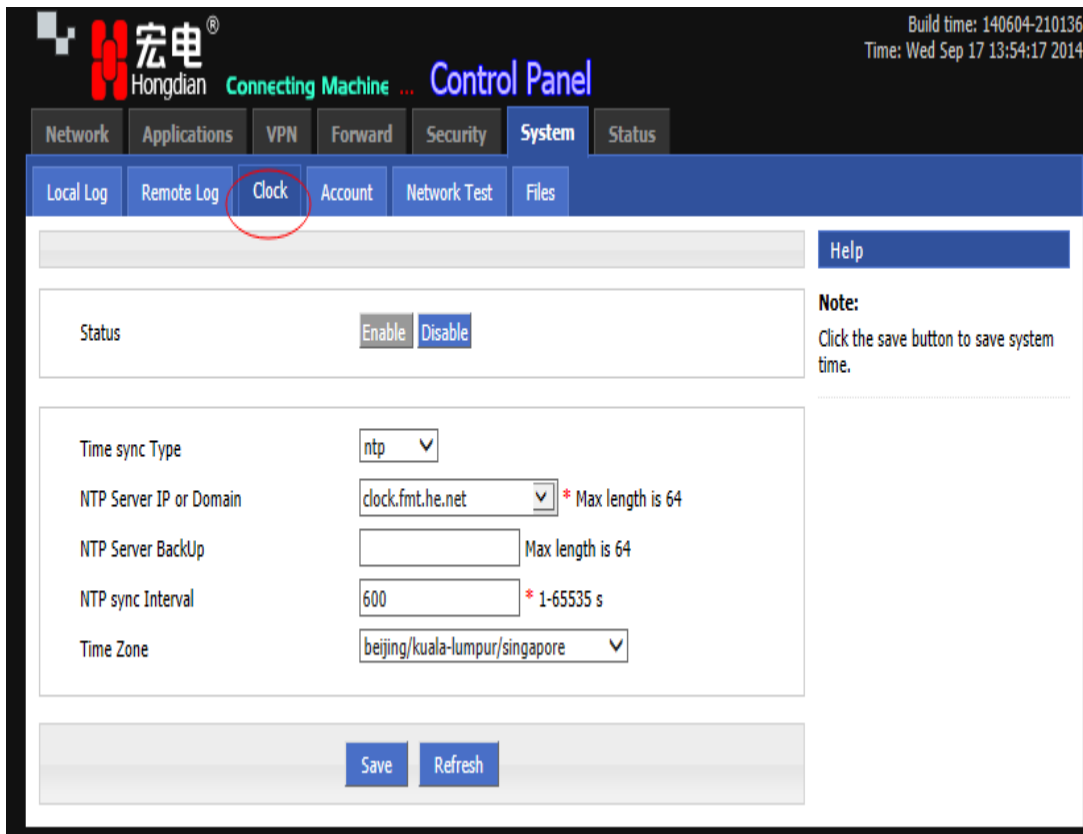



Create smart things



Contact us

 F14 - F16, Tower A, Building 14, No.12, Ganli 6th Road, Longgang District, Shenzhen 518112, China.

 +86-755-88864288-5

 +86-755-83404677

 hongdianchina

 www.hongdian.com

 sales@hongdian.com

 Hongdian_China