www.hongdian.com



Application Guide Hongdian- Load Balance



Contents

Contents	2
Revision History	2
1 Overview	3
2 Description	3

Revision History

Document update notes are described below:

Doc Version	Product	Release Data	Details
V1.0	Hongdian Router	2017.08.25	First Release

1 Overview

"Load Balance" function can be useful in applications with redundant communications links. Using load balancing, both links (including WAN,modem,modem2,and etc.) of the router can be in use all the time. The use of multiple links simultaneously increases the available bandwidth.

This article introduces the load ban lance configuration of Hongdian Router with dual modem. After configured, the two modem network links are used alternately.

2 Description

1. Setup two modem, make them both connect to internet well. Make sure both SIM card can access to internet, as show below.

Application Guide - Hongdian-Load Balance

Ne	twork	Applications	VPN	Forward	Security	System	Status		
Ba	sic Systen	n Information	LAN	WAN Mode	m Routing	Table			
								Help	
mod	em —							Display:	
	Modem	Select		٥				This page displays status.	cellular modem
	Up Tim	e		807 sec	onds				
	Modem	Status		connect	ed				
	Networ	k Type		LTE					
	Signal			attl(a	1)				
	IP Addr	ress		10.21.1	17.7				
	DNS			210.21	195.6				
	SIM Sta	etus		ready					
	SIM IC	CID		898601	1685104940928	85			
	SIM IM	51		4600193	253723670				
	LAC			0					
	CELL II	0		0					
mod	em2								
	Modem	Select		2					
	Up Tim	e		790 sec	onds				
	Modem	Status		connect	ed				
	Networ	к Туре		fdd-ite					
	Signal			1111(3	0)				
	IP Addr	ress		10.231.4	41.43				
	DNS			210.21	196.6				
	SIM Sta	stus		ready					
	SIM IC	CID		898601	1685101686613	37			
	SIM IM	SI		4600193	262754118				
	LAC			9537					
	CELL II	0		62475					
	RSRP			-80 dBm	1				
	SINR			219					
				_					
				R	efresh				

Application Guide - Hongdian- Load Balance

2. Setup both modem and modem2 MASQ as show below:

N	letwor	k Ap	plications	VPN	Forward	Security	System	Status	
N	IAT	Routing	RIP	OSPF	QoS				
MA	SQ								
[Taba fa a				Onemation
				- (-	modem				Delete
					modem	2			Delete
	L					\nearrow			
SN	AT								
								Mapping	
	Prot	ocol	Original	Address	Original Por	t Mappir	ng Address	Port	Operation
DN	АТ								
	Prot	ocol	Original	Address	Original Por	t Mannir	a Address	Mapping	Operation
	TIOC		Ongina	Address	Originari o	С		TOIL	operation
					Add	Defreeb			
					Add	Refresh			

3. Enable Load Balance and setup the static route as show below:

Networ	k Appl	lications	VPN	Forward	Security	System	Status	
NAT	Routing	RIP	OSPF	QoS				
Loa	ad Balance			Enable	Disable			
	Route Type		Netwo	ork	Gateway		Priority	Operatio
	Static Route	9	0.0.0.	0/0	modem		<u> </u>	Delete
	Static Route	•	0.0.0.	0/0	modem2		\mathcal{I}	Delete
				Add	Refresh			

- 4. Connect two PCs to router LAN interface.
- 5. Check the policy route in routing table as below:

Application Guide - Hongdian- Load Balance

Network	Applications	s VP	N Fo	orward	Security	Syste	m Status
Basic Systen	n Information	LAN	WAN	Mode	m Routin	g Table	

Static Route

Network	Subnet Mask	Gateway	Interface	Metric
0.0.0.0	0.0.0.0	0.0.0.0	modem	1
192.168.8.0	255.255.255.0	0.0.00	br0	0
192.168.10.0	255.255.255.0	0.0.0.0	eth0	0
192.168.251.41	255.255.255.255	0.0.00	modem	0
192.168.251.180	255.255.255.255	0.0.0.0	modem2	0

Policy Route

Network	Subnet Mask	Gateway	Interface	Priority		
1.1.1.1	255.255.255.255	0.0.0.0	modem	1		
192.168.8.252	255.255.255.255	0.0.0.0	modem	1		
2.2.2.2	255.255.255.255	0.0.0.0	modem2	2		
192.168.8.6	255.255.255.255	0.0.0.0	modem2	2		

You can see the two IP address of PCs goes through different interface(one is via modem and the other is via modem2) to internet.

6. Test connection

Try to access internet from both PC. Works well.

7. Confirm PC1 and PC2 goes though different modem interface.

Method:

You can search your gateway Internet IP with Google, or visit the URL http://whatismyipaddress.com/ and etc, for checking the IP address. The two PC will have different IP show on the website for they are using different modem.

boogle	where is my IP	. Q
	All Maps Images News Videos More	Settings Tools
	About 20,300,000 results (0.58 seconds)	
	47.88.138.251 Your public IP address	
	→ Find out more about IP addresses	
		Feedback





Contact us

Q F14 - F16, Tower A, Building 14, No.12, Ganli 6th Road, Longgang District, Shenzhen 518112, China.

+86-755-88864288-5

+86-755-83404677

f hongdianchina

www.hongdian.com

➡ sales@hongdian.com

➔ Hongdian_China